Hangzhou Elshangyun Robot Technology Co., LTD

LE307 B - 2 smart drink vending machine use daily operations and the note



After-sales department

2023. 03

Contents

- 1. Machine appearance
- 2. Installation requirements
- 3. Door opening
- 4. Card inserting
- 5. Coffee beans adding
- 6. Melting powder adding
- 7, equipment daily maintenance instructions
- 8. Equipment instruction
- 9. Recipe sheet
- 10、Background instruction
- 11. Problem analysis sheet for coffee machine






Machine appearance






Machine appearance



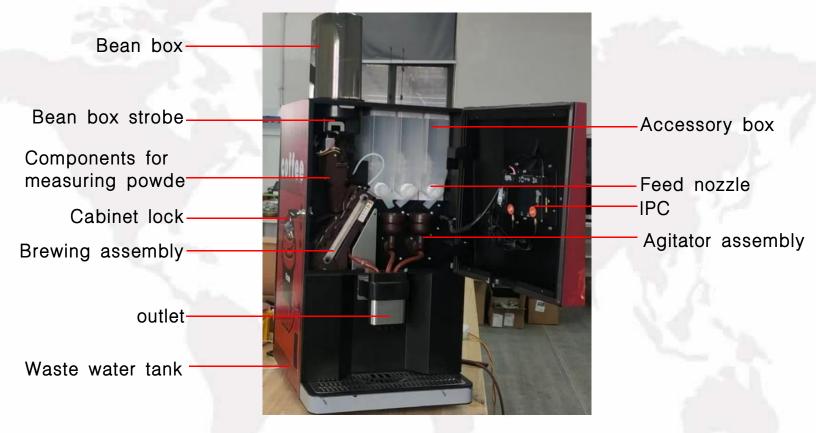

Machine appearance



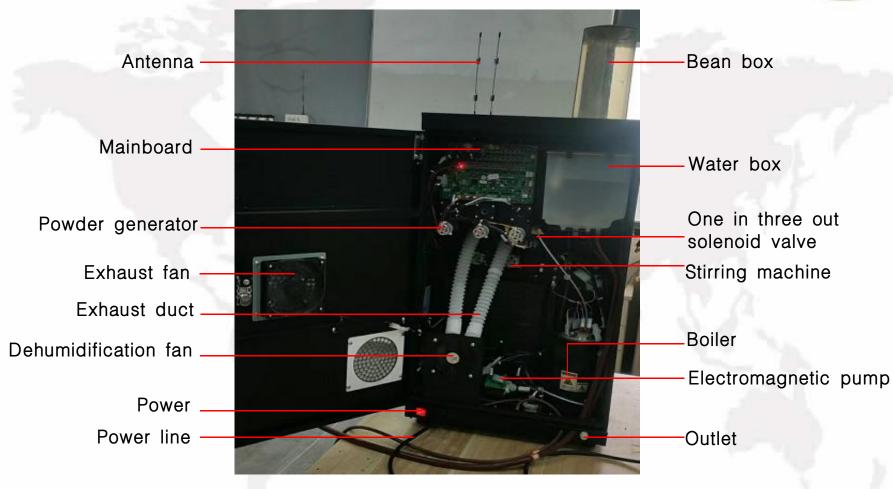

Installation requirements



Before installation, please again confirm security considerations and installation conditions, and strictly follow the steps below to install equipments as shown:





- 1. Put the machine on the bottom cabinet and put pure water into it
- 2. Cut off the cable tie of the power cable and connect the power cable to a grounded power socket.
- 3. If extension cable is needed, professional electrician must carry out operation (grounding wire is essential)
- 4. Power on the device, turn on the power switch (buzzer), and confirm that the device is working.


Door opening



- 1. Using the corresponding key in the lock, key anticlockwise
- 2. Press the switch under the lock handle to unlock the lock handle; Counterclockwise rotation lock handle, pull open cupboard door note: hold the handle to turn right at the same time, pull open cupboard door;

Card inserting



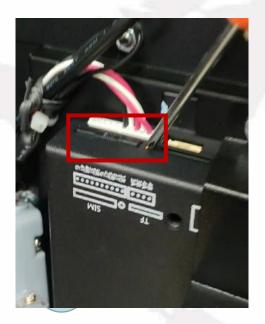





1

2

3

- 1. The door open to turn off equipment, in addition to prepare a card must be calories as shown in figure 2 (mobile unicom, telecom)
- 2. Find the card slot, see figure 1 (3) to open the card slot flow card mount will be prepared


Coffee beans adding







push the bean box gate into the lock bean box outlet

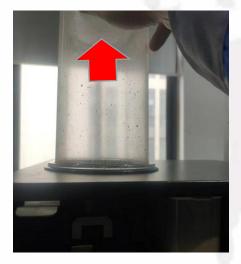





Bean box Push forward in the direction of the arrow to take out the bean box

Coffee beans adding














- 1.pull box on the beans beans warehouse gate
- 2. put the prepared funnel in the mouth, pour the coffee beans
- 3.Lock the beanbox gate, put the beanbox into the device and pull out the beanbox gate. When done, test a drink

Melting powder adding



Aim your hand at the nozzle

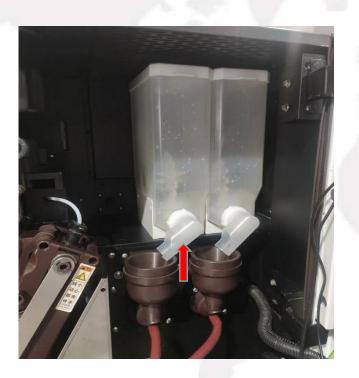

Rotate the nozzle so that it faces 12 o 'clock



Melting powder adding

Lift the front of the material box so that the red circle is inserted and removed from the machine










charging



Put back in the box




Suggestion: After adding the powder, the powder type under the label on the top of the powder box can be avoided to make up the wrong material

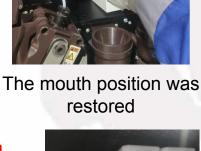

 Eequipment daily maintenance instructions







Find the trash box



Pull out the waste box





Just dump the coffee grounds back into the waste container and close the wicket

Eequipment daily maintenance instructions

Mixing mechanism cleaning





1. First remove the discharge port to facilitate the following operations; 2. Gently pull up fingers inserted into the mixing bowl, release after open;



After the cover is removed, hold the mixing bowl with your hand and gently lift and rotate counterclockwise to remove it



After the bowl cover is removed, hold the bowl with your hand and gently lift it up and rotate it counterclockwise to remove it

Eequipment daily maintenance instructions

Remove the waste water box and the bottom baffle of the waste water box




- 1, pull out waste water box
- 2, find the upper right corner of the fixed waste water box of the baffle lock hook t3, push the lock in the direction shown by the arrow, falls off waste water box under the baffle, take out the waste water box under the flap


Ejector removed







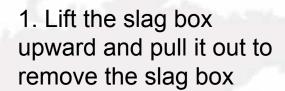

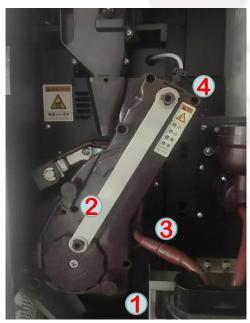



- 2, see stiff, first turn on the position and special brew teflon tube joint is removed by this counterclockwise to loosen, then pull the silicone tube
- 3. Loosen the screws at places 1 and 2 by turning counterclockwise as shown in the figure
- 4, according to the graphic level to pull out



Installing of the bubbler







- 1. During installation, No. 6 corresponds to No. 8 hole, No. 7 corresponds to No. 10 hole, and No. 11 corresponds to No. 12 hole
- 2. After alignment with the above hole position, push the bubbler horizontally to the end, and then rotate clockwise to tighten the No. 1 and No. 2 shaft caps (the installation rotation direction is opposite to the direction when removing the bubbler).
- 3. Connecting positions 4 Teflon tube connectors and 3 silicone tubes
- 4. Install the slag stopper, the lower baffle of the waste water box and the waste water box, and test a cup of drink after completion

Turn on the machine to exhaust gas





After the preparation work is done, insert the power plug into the three-wire grounding socket, turn on the power switch on the back of the machine, and enter the system startup interface on the screen. If the machine is powered on for the first time, it must be vented. After the machine is powered on, it will be necessary to exhaust. If the machine is powered on for the first time, click here to exhaust the boiler










After exhausting the gas, it will directly enter the eller state and enter the use state for about 5 seconds. After entering the use state, if the Internet is connected, the wireless network area network will be displayed if it is a wireless network, such as 3G4G network will be displayed on the traffic card

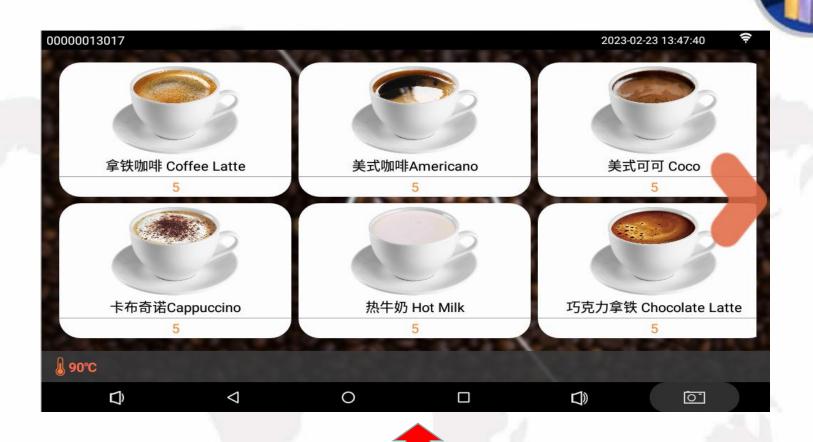

If you need to buy goods, first select the type of goods, and then select the payment method to purchase

entry mode choice



In standby mode, a password box will pop up if you click the number in the upper left corner of the screen several times. Enter the password (352356) and click OK to enter the "Function Operation menu".









equipment number



The device ID number of the upper computer is the unique identification number of the host, which is the unique address of the background of the machine. This is used for changing the device number. The password is 352356







Machine configuration






When you meet the machine prohibition of use, the password is 352356

mode of payment



Payment method, this is used to set the collection, the password is 352356, change you need to contact the administrator



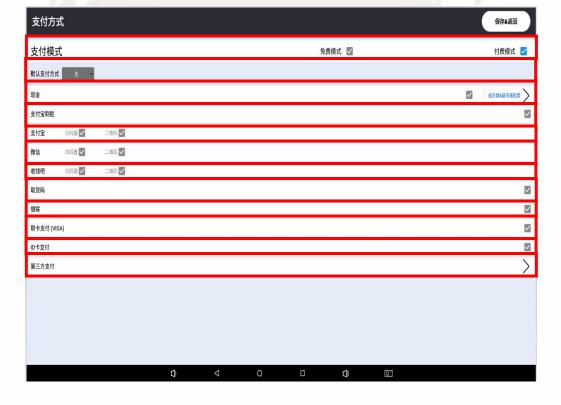



Coffee name, recipe, price setting



On the beverage setting screen, you can set the name, price, formula, and number of drinks. Number of drinks: drink 1 to start in order to enable, customers are free to set himself. Name and price of the drinks: name and price can be directly changes, pay attention to the cash price multiples of at least 0.5 yuan and 0.5, pay treasure and WeChat at least 0.01 yuan.





import the picture first according to the requirements of the picture and into the U disk import





management of the coffee pictures Coffee picture

fault management

回到销售界面	设置	退出
		运营商:以勒生产部,收款方:后台未配置收款单位
设备编号: 00000013017		>
机器配置		>
支付方式		>
咖啡名称、配方、价格配置		>
咖啡图片管理		>
故障信息		
自定义提示: 🗸 🖟 原料不足		<u> </u>
销售数据统计		>
D 4	0 🗆	

When the machine is in trouble, the fault problem code will appear here. Generally, the problem will disappear after the machine restarts. If you want to know the specific problem, click restart the device, which is for the specific problem



sales statistics



Enter the sales data statistics interface, where you can view the total sales volume and total sales amount, as well as real-time transactions, and the sales data can be cleared. If you need daily or monthly sales information, you can view and export it in the background.



import and export





The sales interface background picture, screen saver picture, grinding waiting video, coffee name picture can be replaced, import and export into the USB disk, according to the import and export instructions



Other Settings



This function is optional. It mainly plays advertisements. Contact the administrator if you need to use it



Coffee test







Enter the coffee test interface, you can view and test the status of the machine. Usually used are exhaust, cleaning and grinding bean device, cleaning and stirring system, beverage testing, boiler temperature, ask the current state, synchronization parameter reset, other functions as far as possible do not use.



MDB testing

回到销售界面	设置	退出
故障信息		运营商:以勒生产部,收款方:后台未配置收款单位
自定义提示:	\supset	
销售数据统计		>
导入、导出		>
其他配置		>
咖啡测试		>
MDB测试		>
版本		>
	0 🗆	
	•	1
	prohibition of use	



Edition



The company has been optimizing the software of this product and will release new versions from time to time. Customers can check the update information of the version here. It is better to update the new version if it occurs.

Recipe sheet

	LF307B Parameter ratio	o Reference		
			lient 3 sugar	
		Water volume ml	Powder time s	Powdered g
62.5	Order 1 Grind beans	20	2007	
3	Order 2 material Track 1 (Milk Powder)	100	4S	
cappuccino	Order 3 Grind beans	20		
	sugar			100
	13,00			
=		Water volume ml	Powder time s	Powdered g
	Order 1 Grind beans	20		
	Order 2 Grind beans	20		
Latte coffee	Order 3 Material Track 1 (Milk Powder)	100	4 s	
	sugar		0.7	
			10.0	
			The same of the sa	No.
Ξ		Water volume ml	Powder time s	Powdered g
Chocolate latte	Order 1 Grind beans	20	- VI	7
	Order 2 Track 1 (Milk Powder)	50	3.5s	U 16
	Order 3 Grind beans	20		1
	Order 4 track 2 (coco Powder)	60	2.55s	
	suagr			

Recipe sheet

四		Water volume ml	Powder time s	Powdered g
	Order 1 Grind beans	90		
Cafe Americano	Order 2 Grind beans	90		
200			Marie Line	
1	D P			
五		Water volume ml	Powder time s	Powdered g
milk	Order 1 Material Track 1 (Milk Powder)	165	5s	E.
	/ 1			1
六		Water volume ml	Powder time s	Powdered g
Hot cocoa	Order 1 Material Track 2 (cocoa Powder)	165	4s	
l lot cocod			12,	1
				77
七		Water volume ml	Powder time s	Powdered g
	Order 1 Material Track 2 (cocoa Powder)	90	2.5s	V y
Chocolate Milk	Order 1 Material Track 2 (Milk Powder)	90	1.5s	- 7

Recipe sheet

八		Water volume ml	Powder time s	Powdered g
Mocha Coffee	Order 1 Grind beans	20	-	
	Order 2 Material Track2(cocoa Powder))	60	2.5s	
	Order 3 Grind beans	20		
	Order 4 Material Track 1 (Milk Powder)	60	2s	
九	Order 1 Grind beans	Water volume ml 45	Powder time s	Powdered g
Italian aaffaa	Order F dillia bealts	43		
Italian coffee	G.4 T.	er P		7 7 7
+		Water volume ml	Powder time s	Powdered g
	Order 1 Grind beans	45		
double Italian coffee	Order 2 Grind beans	45		5
				d .
	A-11			
+-	Order 1 Cried hours	Water volume ml	Powder time s	Powdered g
	Order 1 Grind beans	45		
Latte Macchiato	Order 2 Material Track 1 (Milk Powder)	100	4s	
			1 IV A	1
+=		Water volume ml	Powder time s	Powdered g
	Order 1 Grind beans	20		
	Order 2 Material Track 2 (cocoa Powder))	90	1.5s	
Mocha Cocoa	Order 3 Grind beans	20		
	Order 4 Material Track 1 (Milk Powder)	30	1s	
+ <u>=</u>		Water volume ml	Powder time s	Powdered g
1-	Order 1 Grind beans	20	rowaer time 3	r owdered g
	Order 2 Material Track 2(cocoa Powder)	60	2.5s	4 8
Chocolate Coffee	Order 3 Grind beans	20		
	Order 4 Material Track 1 (Milk Powder)	50	3.5s	
	sugar			

login page

Platform website: https://new.yilevme.com






Note: For customers who purchase our vending machine or coffee machine for the first time, our business will create an account for you, and then you can log in to the platform to create an administrator user of the existing machine. And the first login background is recommended to change the password, in the personal center to change the password


Background home page



personal center change passcode

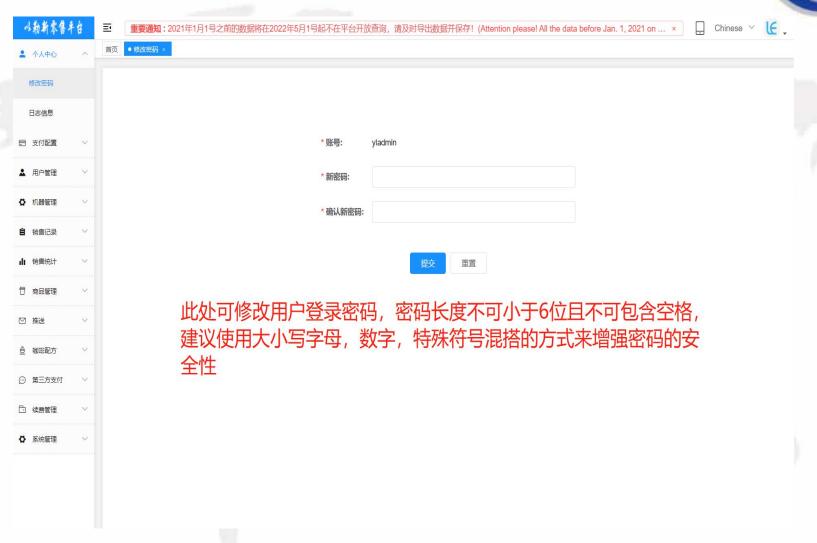

personal center log information

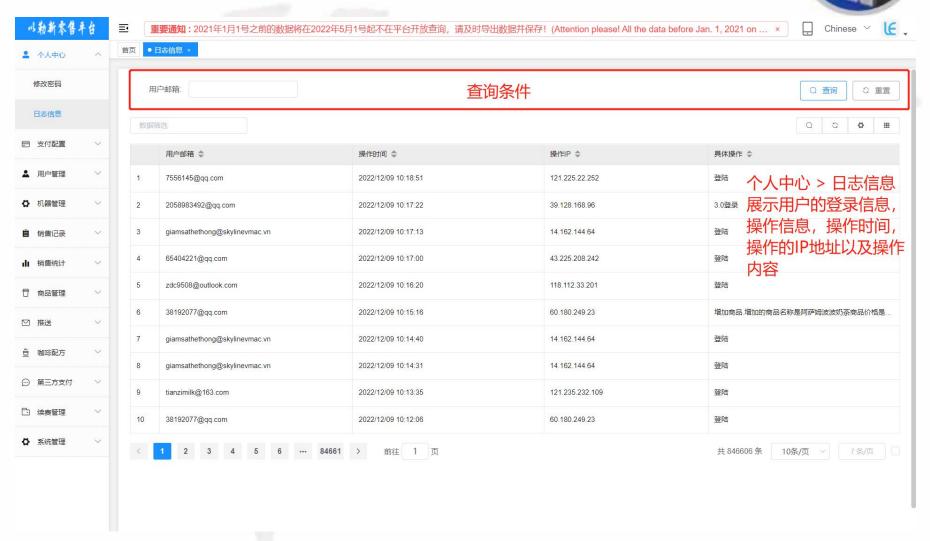



collection unit



The collection unit is the collection parameter information of the machine. If payment is made by Alipay, we chat or ID card, the collection unit needs to be configured. The machine of our company receives payment directly into the carrier's account rather than through the company's account, so we need to configure a collection unit

collection unit


new collection unit

新增		[] X
* 收款单位名称		
	收款单位名称是必填项	
* 联系人	联系人是必填项	
* 联系人电话		
* 地址	联系人电话是必填项	
	地址是必填项	1.
新增收	文款单位(收款商户),需要填写收款单位的基本信息,按照要求填写完收款单位的基本信息后点击右下7	方的确
定按钮	日来新增一个收款单位	The state of the state of
	关闭	确定
	The state of the s	· 明从E



collection unit Editing receiving unit

修改		[] X
* 收款单位名称:	以勒软件部运营	
* 联系人:	钟建	
* 联系人电话:	13675885236	
* 地址:	软件部	
	文的收款单位的修改按钮,或者选择要修改的收款单位(勾上复选框)然后点击上方修改按钮, 输入修改的内容后点击确定按钮即可修改收款单位信息	来到编辑收款单
	关闭	重置。

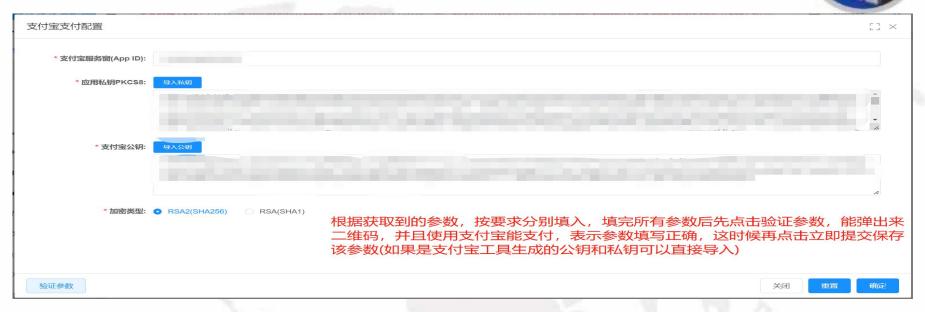



After filling in all parameters, click the verification parameter to pop up the two-dimensional code, and use Alipay to pay, indicating that the parameters are correctly filled. At this time, click "Submit immediately" (OK) to save the parameter (if the public key and private key generated by Alipay tool can be directly imported).

collection unit Configure a wechat account





We hat and Alipay are the same. After obtaining the parameters of we hat, fill them in according to the prompts, click verify the parameters, and pop up the two-dimensional code. If the payment can be successfully made by scanning the code of we hat, the parameters are correct, and click Submit immediately (OK) to save the parameters.



ID卡支付配置				(3 ×
- Blog:				
neen				
28				
	在ID卡后台获取到参数,按提示要求填写完成点击确定按钮保存即可			
-				
		238	-11	80

Obtain the parameters in the background of the ID card, fill them in according to the prompts and click the "OK" button to save.


User management Carrier list





User management Add carriers

新增		[] X
*运营商名称:		
* 联系人:		
* 联系人电话:		
*省市:		V.
*详细地址:		
描述:		
		h
	按左侧提示,填入运营商信息,点击确定	
	关闭	確定

 






User management User list





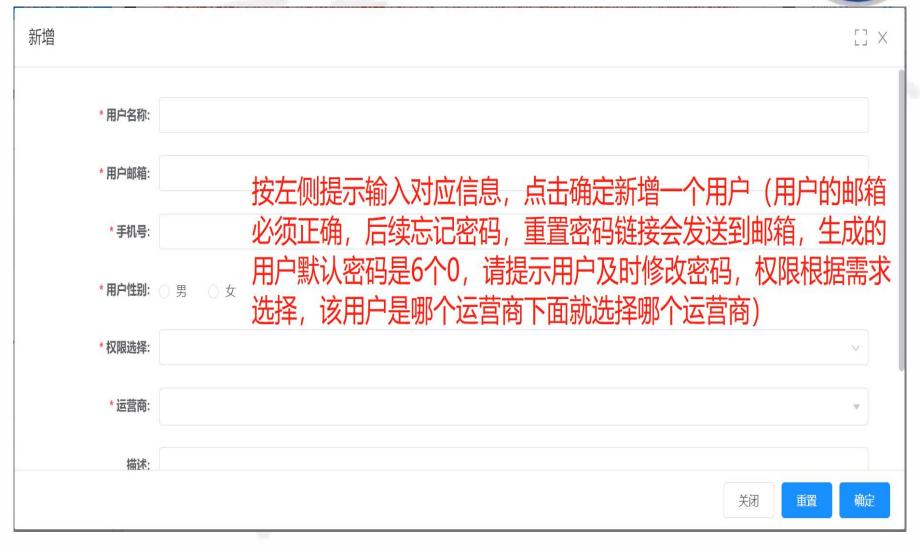

User Management Edit User




User Management Configure user permissions



Machine Management My machine




Machine Management Configure machine collection account

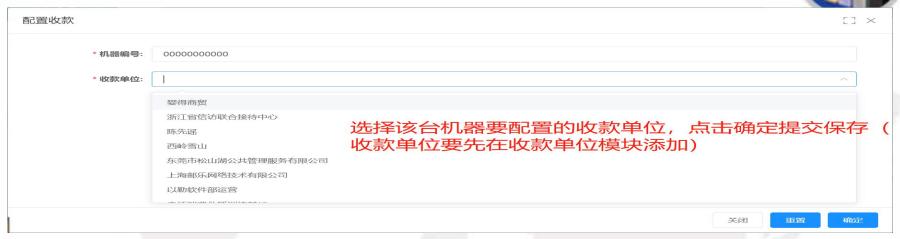

转让机器



Machine Management Machine Status

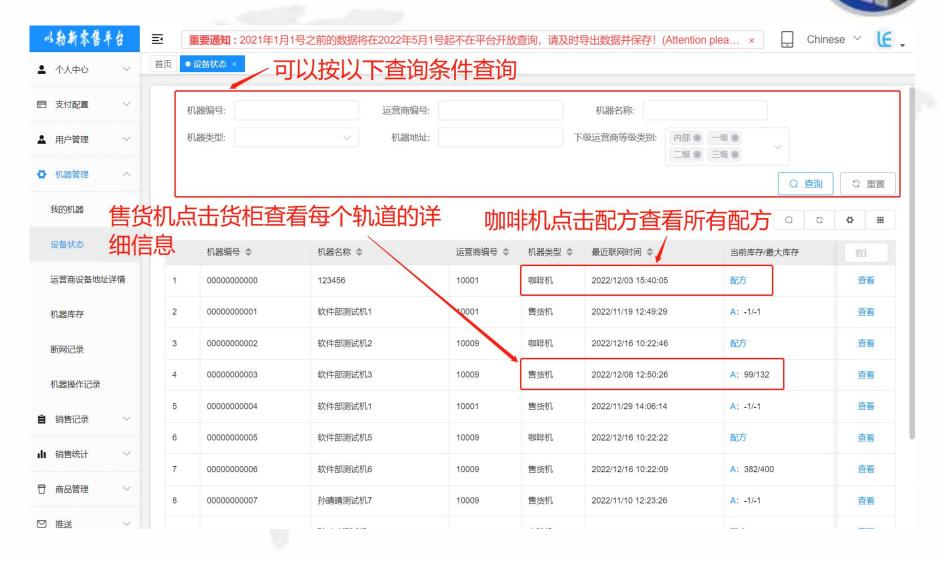



Machine Management Vending machine inventory information

机器货柜详情	对应	机器上的	的轨道编	号	左边是该转	九道剩余	余库存,	右边是	最大库存	×
机器编号	3	0000000003	3	货道类型		最大库存		132	当前库存	99
轨道编号	10	11	12	13	14	15	16	17	18	19
商品名称	-1	-1	-1	-1	-1	?	?	?	?	?
库存信息	0/3	0/3	0/3	0/3	0/3	?/?	?/?	?/?	?/?	?/?
商品价格	-1	-1	-1	-1	-1	?	?	?	?	?
轨道状态	正常	正常	正常	正常	正常	?	?	?	?	?
同步时间	2022-12-14 15:07: 10	?	?	?	?	?				
错误信息	正常	正常	正常	正常	正常	?	?	?	?	?
出错时间	正常	正常	正常	正常	正常	?	?	?	?	?
轨道编号	20	21	22	23	24	25	26	27	28	29
商品名称	-1	-1	-1	-1	-1	?	?	?	?	?
库存信息	0/3	0/3	0/3	0/3	0/3	?/?	?/?	?/?	?/?	?/?
商品价格	-1	-1	-1	-1	-1	?	?	?	?	?
轨道状态	正常	正常	正常	正常	正常	?	?	?	?	?
同步时间	2022-12-14 15:07: 10	该设	备上这个	卜轨道的	商品的售	卖价格				
错误信息	正常	正常	正常	正常	正常	?	?	?	?	?
出错时间	正常	正常	正常	正常	正常	?	?	?	?	?
轨道编号	30	31	32	33	34	35	36	37	38	39
商品名称	330g	250g	250g	测试1	测试	?	?	?	?	?
库存信息	3/3	3/3	3/3	3/3	2/3	?/?	?/?	?/?	?/?	?/?
商品价格	2.5	5.5	5.5	4.0	0.01	?	?	?	?	?
轨道状态	正常	正常	正常	正常	正常	?	?	?	?	?
同步时间	2022-12-14 15:07:	2022-12-14 15:07:	2022-12-14 15:07:	2022-12-14 15:07:	2022-12-14 15:07:	?	?	?	?	?

Machine Management

Coffee Machine Recipe Information

机器货柜详情

机器编号	0000000	1753	货道类型	咖啡种类	
订单号:1	订单号:2	订单号:3	订单号:4	订单号:5	
名称:Black tea (红茶)	名称:latte macchiato (拿铁玛奇朵)	名称:Concentrated macchiato (浓缩	名称:Coffee Latte (拿铁咖啡)	名称:Cappuccino (卡布奇诺	
价格(元):20	价格(元):20	价格(元):20	价格(元):20	价格(元):20	
类型:热	类型:热	类型:热	类型:热	类型:热	
步骤1:	步骤1:	步骤1:	步骤1:	步骤1:	
粉料名称:Black tea (红茶)	粉料名称:Milk (牛奶)	粉料名称:咖啡豆	粉料名称:Milk (牛奶)	粉料名称:Milk (牛奶)	
水量(ml):200ml	水量(ml):100ml	水量(ml):60ml	水量(ml):80ml	水量(ml):100ml	
下粉时间(s):5s	下粉时间(s):5s	下粉时间(s):0s	下粉时间(s):3s	下粉时间(s):3s	
搅拌时间(s):0s	搅拌时间(s):0s	搅拌时间(s):0s	搅拌时间(s):0s	搅拌时间(s):0s	
步骤2:	步骤2:	步骤2:	步骤2:	步骤2:	
粉料名称:无	粉料名称:咖啡豆	粉料名称:Milk (牛奶)	粉料名称:咖啡豆	粉料名称:咖啡豆	
水量(ml):0ml	水量(ml):100ml	/大量(ml):30ml	水量(ml):120ml	水量(ml):100ml	
下粉时间(s):0s	下粉时间(s):0s	下粉时间(s):2s	下粉时间(s):0s	下粉时间(s):0s	
搅拌时间(s):0s	搅拌时间(s):0s	搅拌时间(s):0s	搅拌时间(s):0s	搅拌时间(s):0s	
步骤3:	步骤3:	步骤3:	步骤3:	步骤3:	
粉料名称:无	粉料名称:无	粉料名称:无	粉料名称:无	粉料名称:无	
水量(ml):0ml	/火量(ml):0ml	水量(ml):0ml	水量(ml):0ml	水量(ml):0ml	
下粉时间(s):0s	下粉时间(s):0s	下粉时间(s):0s	下粉时间(s):0s	下粉时间(s):0s	
搅拌时间(s):0s	搅拌时间(s):0s	搅拌时间(s):0s	搅拌时间(s):0s	搅拌时间(s):0s	
步骤4:	步骤4:	步骤4:	步骤4:	步骤4:	
粉料名称:无	粉料名称:无	粉料名称:无	粉料名称:无	粉料名称:无	
水量(ml):0ml	水量(ml):0ml	水量(ml):0ml	水量(ml):0ml	水量(ml):0ml	
下粉时间(s):0s	下粉时间(s):0s	下粉时间(s):0s	下粉时间(s):0s	下粉时间(s):0s	

关闭

刷新

Machine Management Machine Distribution Details






Machine Management

Vending machine generates replenishment orders (transferred to machine inventory details)
Generate a replenishment order based on the vending machine's inventory
Disconnection records





Machine Management Machine inventory details

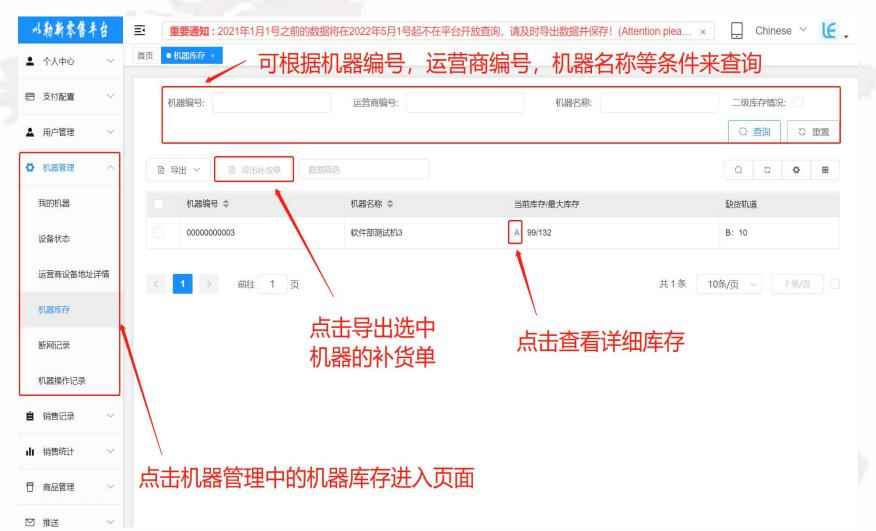

Machine Management Machine operation records





Device electronic lock management (to be updated)

View the electronic lock information and unlock records of all devices

Equipment electronic lock

 
Displays electronic lock information of all devices






Sales record A record of sales failures






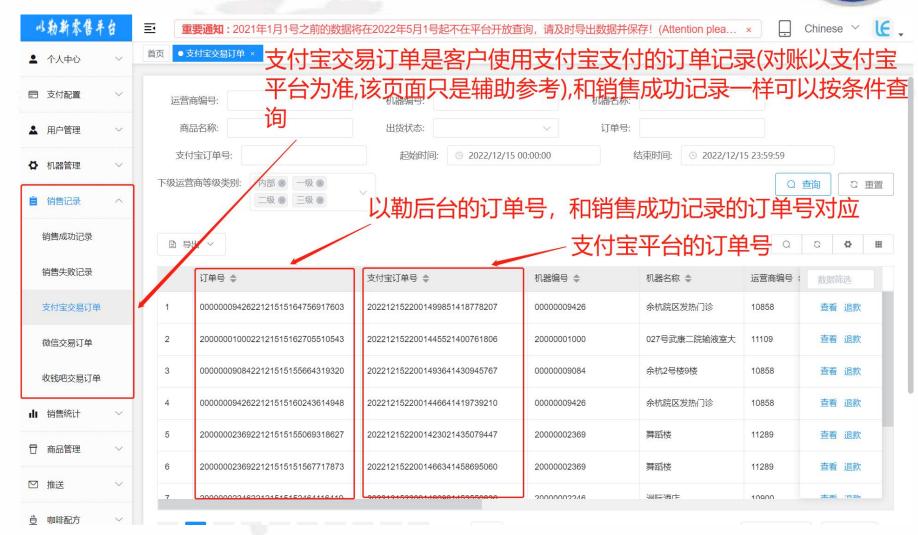

Sales record

Transaction order on wechat

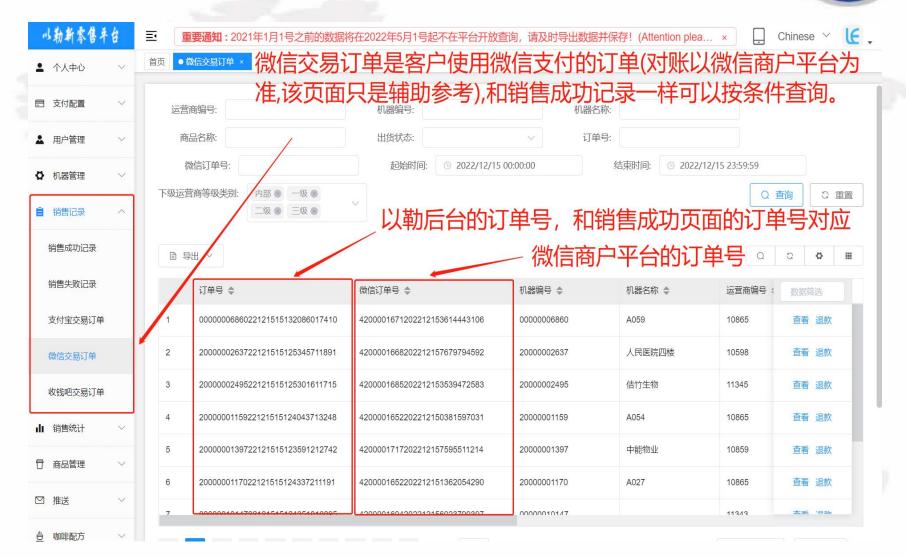

Sales record transaction order on shouqianba



Sales statistics Hourly sales statistics



The screen displays the 24-hour sales statistics of all machines on the current day. You can select the date, machine number, and nickname to query by conditions.

Sales statistics Daily sales statistics



The screen displays the 24-hour sales statistics of all machines on the current day. You can select the date, machine number, and nickname to query by conditions.

Sales statistics Monthly sales statistics



The sales volume and sales statistics of all machines in the month of the current year are displayed on the interface. You can enter conditions on the interface to query according to the conditions.

Sales statistics Machine sales statistics



The screen displays the sales volume, cost, profit and total sales volume of all machines on that day. You can enter the terms on the screen to search according to the conditions





Sales statistics

Top 10 list of commodities (function merged into commodity statistics)

Entering the interface is the information of the top ten products with the highest sales volume of all machines today. You can enter the conditions on the interface to search according to the conditions

Top 10 list of equipment (function combined into machine sales statistics)


Entering the interface is the information of the top ten machines with the highest sales volume of all machines today. You can enter the conditions on the interface to search according to the conditions

Commodity statistics

The screen displays the sales volume, cost, profit, and total sales volume of all products on the same day. You can enter conditions on the screen to search by conditions




Commodity management

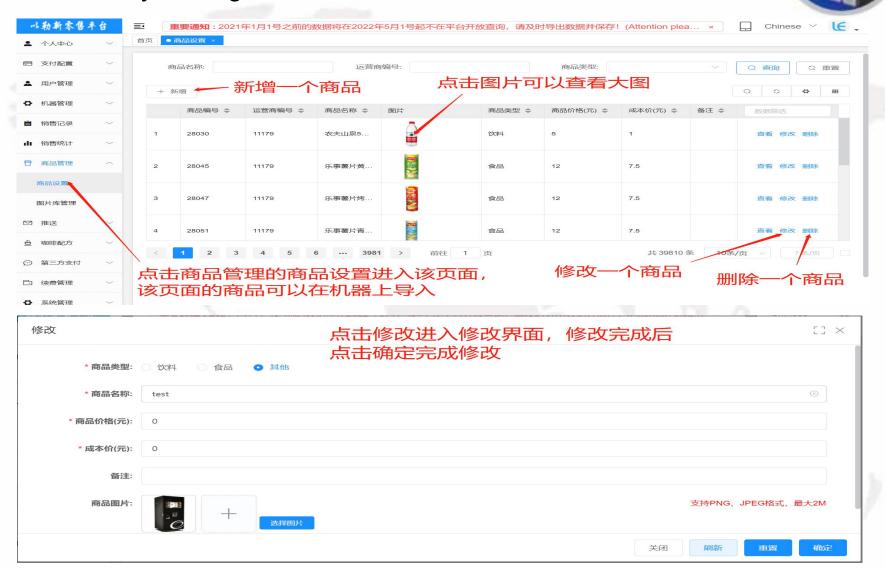




Commodity management

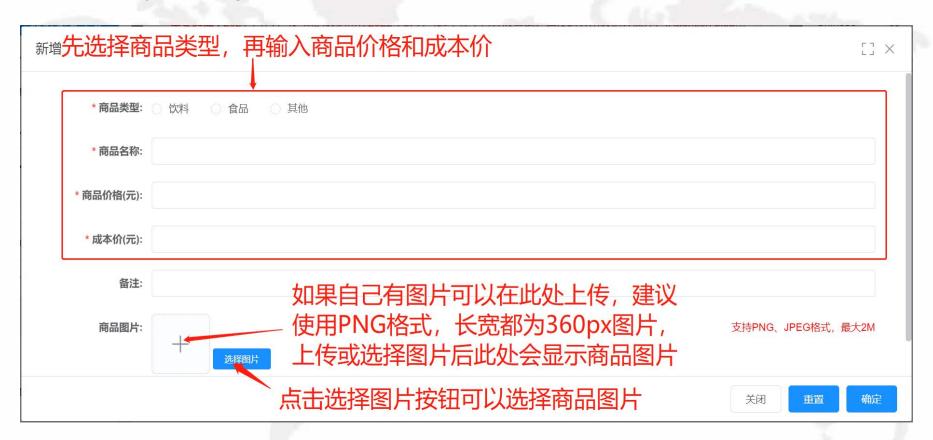




Push management

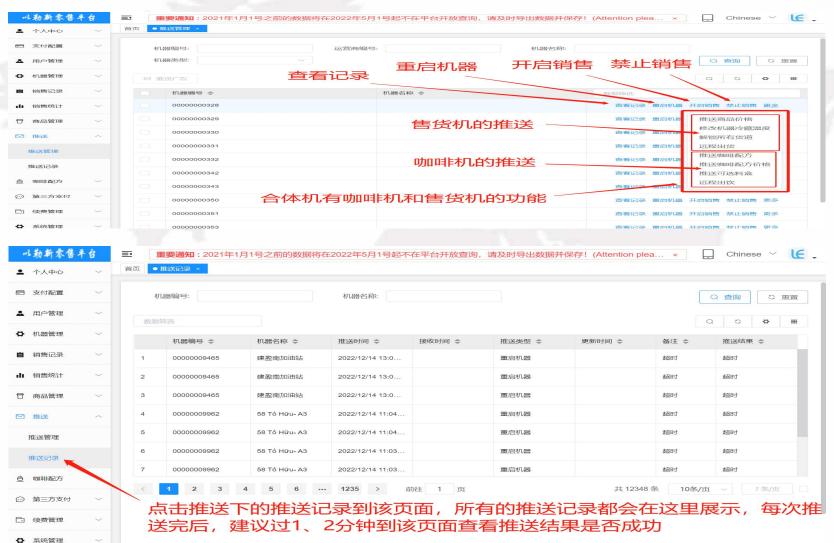


Coffee machine recipe management

recipe management

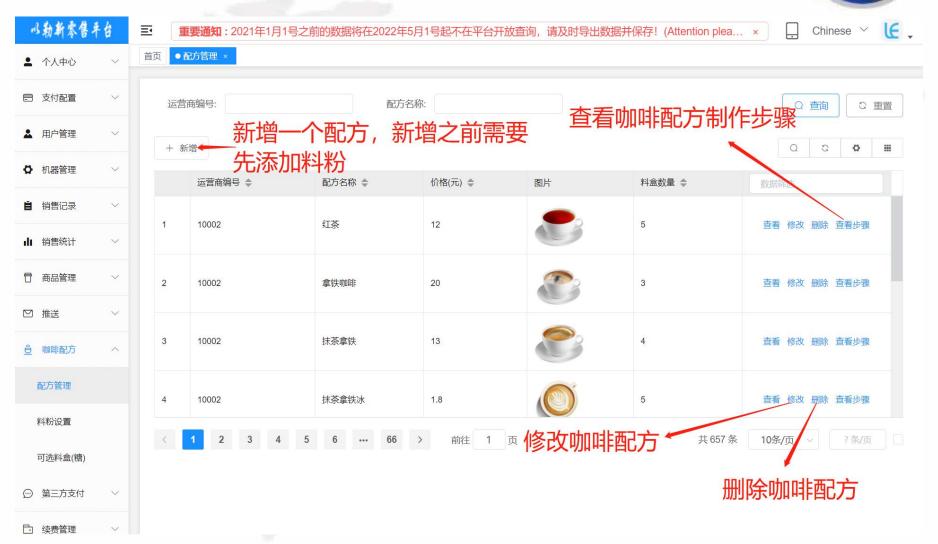




Coffee machine recipe management recipe management

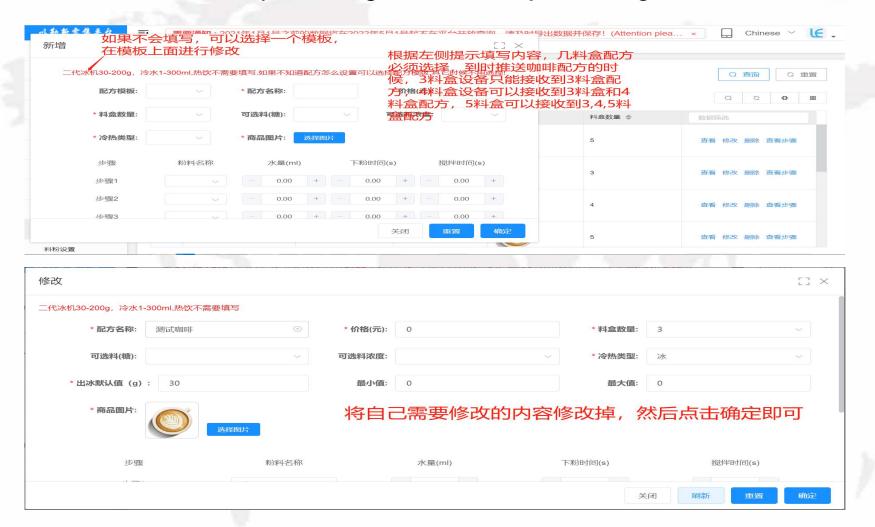





Coffee machine recipe management Powder setting

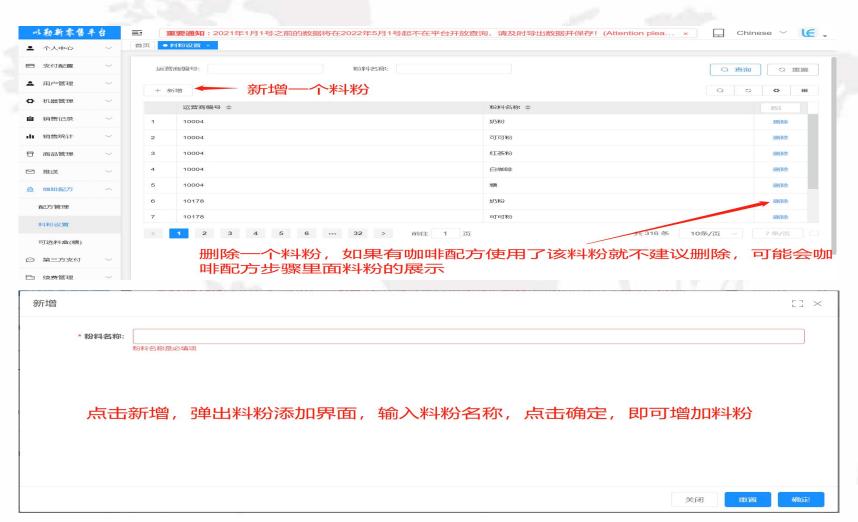

Coffee machine recipe management Optional material track setting

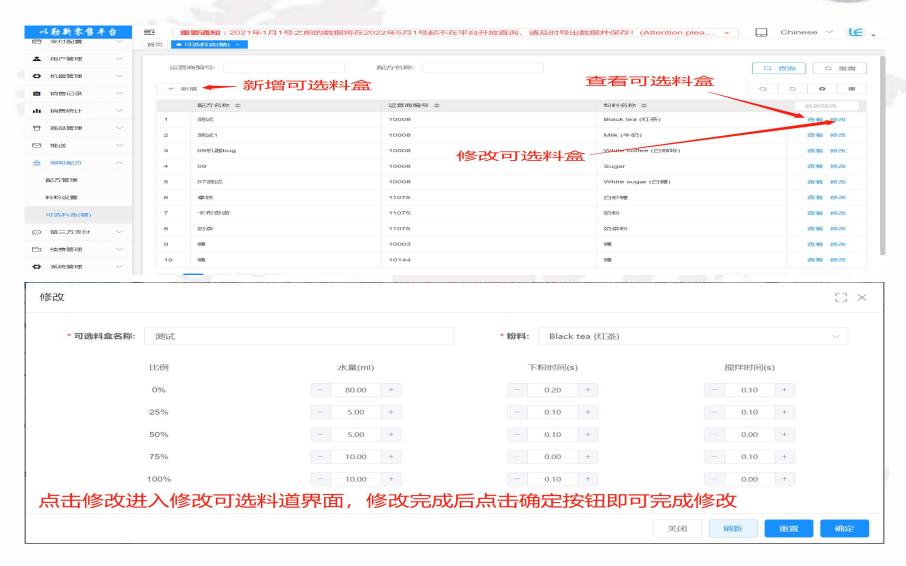

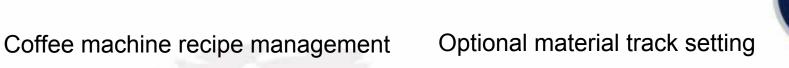





Bugs and suggestions (to be updated))

If users find bugs on the platform or have other suggestions, they can submit them on the functional interface

Renewal management

Display machine expiration time, renewal record and other information, as well as renewal function

Machine renewal






Machine renewal



Renewal management Renewal record

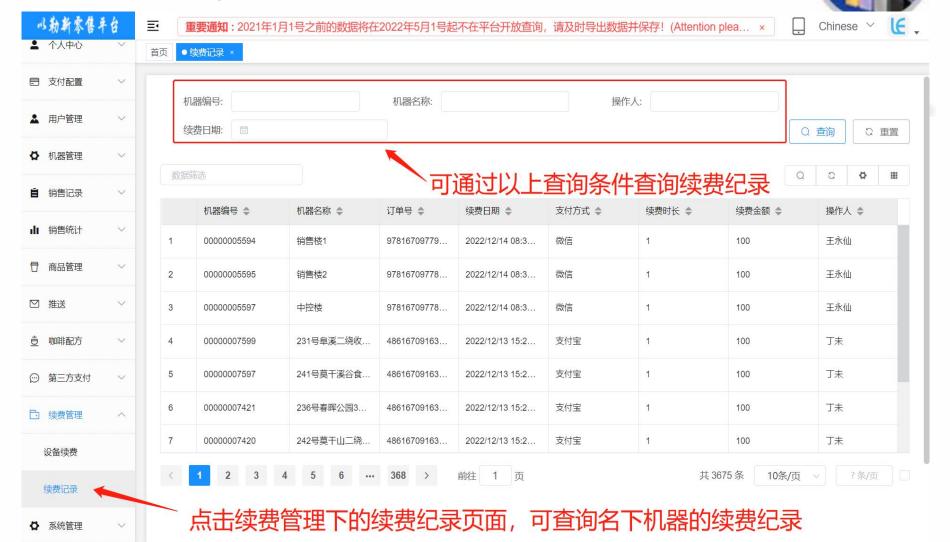

Problem analysis sheet for coffee machine			MA	
sequence	Mass anomaly	Cause analysis	Treatment scheme	remarks
		— Maybe the coffee mix isn't right	1. Adjust your drink mix	
1	No drink	二、The outlet or powder line may be blocked	1. Water or powder pipes should be cleaned timely or regularly to ensure the normal discharge of beverages.	
2			2. Replace the pressure relief valve where the beans are grinding	
		—. The grinding motor may jam beans or other foreign bodies	1. Check whether there are beans or other foreign bodies stuck at the grinding motor and deal with them in time.	
	Grinding time out	The bean bin card may be closed by mistake, or the bean box gate may not be opened when the bean is added	1. Check whether the bean bin card board is opened.	
2		■ The grinding motor cable may fall off	1. Check all the connections of the grinding bean motor to see if there are any falling off or broken.	
		四、No power supply for the grinding board	 Check whether there is 220V voltage output when grinding beans on the grinding bean driving board. No need to replace the grinding bean driving board 	
			2. Replace the grinding motor	
		—. Restart the machine to check whether the falling powder electromagnet works	1. Check whether the wire is loose. 2. Replace the falling powder electromagnet	1 6
3	Falling powder fault	Check whether there is coffee powder in the falling powder assembly	Clean the coffee powder inside the powder module	1
		三、Check falling powder microswitch in falling powder assembly	1. Replace the micro switch	

4	Brewing timeout	the bubbler may be stuck powder, parts dislocation	1. check whether the bubbler card powder, if the powder directly clean, if dislocation need to disassemble the bubbler and reassemble.	
		, there may be a problem with the brewing motor	1. Check the brewing motor. There are two microswitches on the brewing motor. Some microswitches may move up, so you need to fold them down with tools.	
		≡ . maybe the brewing motor is broken	1. Replace the brewing motor	
		四、No power supply for the grinding board	1. Test whether there is 220V voltage output when grinding beans on the grinding bean driving board, without replacing the grinding bean driving board	51
		五、the powder is too much to fall off	1. adjust the powder electromagnet storage	part .
		The coffee beans are ground so finely that the fine grounds cannot be removed	1. Adjust the thickness of ground beans	
5	Shift timeout	— , test the nozzle to see whether the moving mouth moves or not	1. the nozzle does not move to replace the nozzle motor	Test whether 12V direct current is available
		, test the nozzle to see whether the moving mouth is moving in the right place	2. cleaning nozzle	Check the thread for looseness
		Detect whether the nozzle micro switch is responsive	3. replace the nozzle micro switch	
6	Temperature sensor fault	Check whether the cable of the sensor is loose	Reinsert the cable end of the temperature sensor	
		□. Boiler temperature test	1. the boiler temperature is too high, turn off the machine boiler heating wire unplug a root, turn on the exhaust until the boiler temperature to room temperature, turn off the machine and plug in the heating wire, turn on 2check whether the end line of the driving plate is loose	¥)
			3. Replace the temperature sensor	

	The data card may be overdue	1. Let the customer recharge the data card for the data card.		
		the flow card may be damaged	1. replace the flow card.	
7	The machine has no network	= . industrial computer may not read the network	1. the signal is too weak	A 1004
		四、The antenna may not be plugged in properly	Check whether the network cable and antenna are loose	
		五、ndustrial computer card slot may have problems	1. replace the industrial computer	67
		network, signal problems	Check whether the network is normal and the signal is smooth	18
8	Alipay and wechat payments are not allowed	there may be no background binding	1. the background binding, bind the machine ID to the background management.	
	- T-	三、there may be no binding of payee and public account information	1. Bind the information of the payee and provide various information of the payee according to the sales process.	
9		—, he machine may be out of power at the power source	Check whether the machine has power at the power connection.	
	The machine is out of power	The two ends of the power cable may be loose	1. Check whether the inner cable head of the power box is loose. 2. Check whether the filter wire head is loose	1/2
		三、the switching power box may be damaged	Measure whether the power box has voltage output, without replacing the corresponding power box	
10	The sheet metal of the machine has static	—, whether the machine is grounded	1. Check whether there is three-phase electricity in the machine socket. If there is no need to connect the ground wire behind the machine.	7)
	electricity	, the machine may leak electricity	1. check whether the machine inside the wire head loose resulting in machine leakage.	

11	Flowmeter failure	—, detect the flow meter inlet is blocked by stains	1. Dredge the flow meter. Or replace	First check whether the flowmeter wire head is loose
			2. Test whether the solenoid valve is normal	
			3. Test whether the booster pump is normal	
			4. Replace the driving plate	
	Unheated boiler	—, the temperature switch may trip.	1. check whether the temperature switch trip, jump directly on the temperature switch button down	51.1
12		, the temperature sensor may be bad	1. Replacement	Check that the heating line is properly inserted
12		三、grinding bean drive plate does not power supply	1. Test whether there is 220V voltage output when grinding beans on the grinding bean driving board, without replacing the grinding bean driving board	
	No sugar. No powder	—. Check whether sugar or powder is caked	1. Clean the material box and replace it with new powder	
13		check whether the sugar box powder box is installed	2. Reinstall the sugar cartridge	
20		三、check whether the motor power supply is 24V power supply	3. Check whether 24V voltage is output at the 24V low voltage driving plate of the switching power box. If not replace it	Pay attention to check whether the material box motor reverses
14	The tank cannot contain the water level	the micro switch does not respond	1. check whether the micro switch is bad, bad need to be replaced	* /
14		the water level floating ball may float problems	1. The water level float needs to be cleaned or replaced	

Content is constantly updated

15	The touch screen jumps	The machine may not be connected to a ground wire	1 1 1 1 1 connect the machine to a ground wire	
	randomly	_, the screen may not be connected to the ground wire	1, connect theindustrial compiuter to a ground wire	
16	Tank pumping overtime	Check the bucket for water	1. Replace the purified water	
		Check whether the pumping pump is pumped	2. Replace the pump	First test whether the pump is energized (24V)
	Full waste drum	check the waste water bucket waste water	1. Clean the waste water bucket	1
17		check the waste water float has not fallen or not	2. Clean up the float	and the same
		三、check float micro switch	3. Replace the micro switch	
18	no water when making b drinks	—、check whether there is no working sign of the booster pump	1. check whether there is a problem with the booster pump, there is a need to replace	
		, check whether the instant mixing system is blocked by foreign matter	The stirring system needs to be cleaned timely or irregularly	'M.
		三、Check whether the solenoid valve has no working signs	1. the solenoid valve does not work, it needs to be replaced	40.
		四、check the flow meter is damaged or blocked	Clean the flowmeter or replace it	





THANKS!